


BOTTOM RAIL DRILL PARTS BOOK

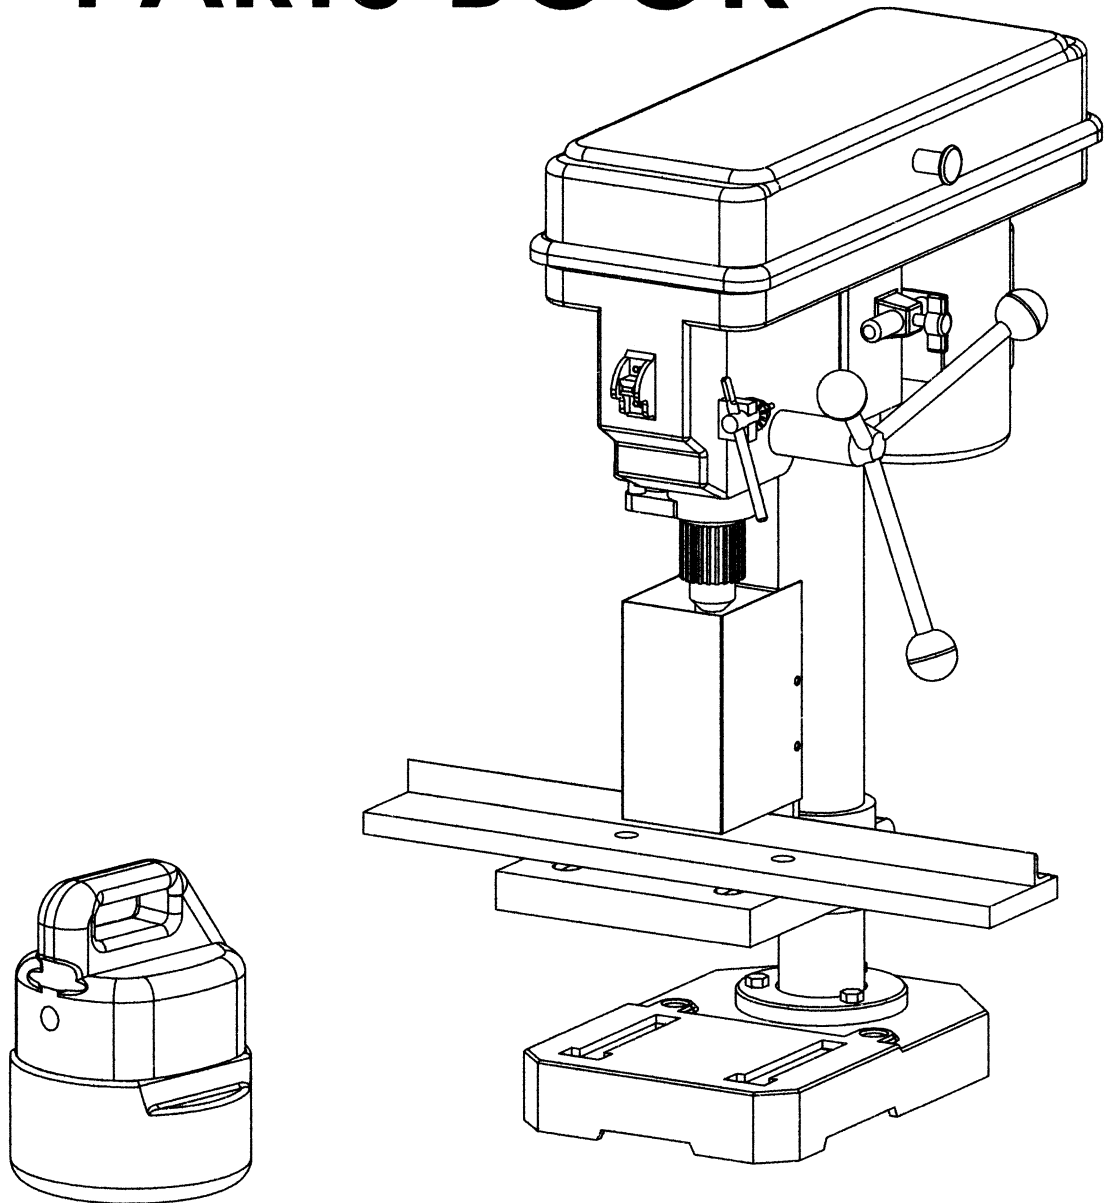

REV.8-18-04


1115 Explorer St.
Duncanville, TX 75137-3011

E Mail (davidw@ltl-int.com)

Phone (972) 709-7673
Phone (800) 533-3371

Web Site(www.ltl-int.com)

Fax (972) 709-7674
Fax (800) 985-1020

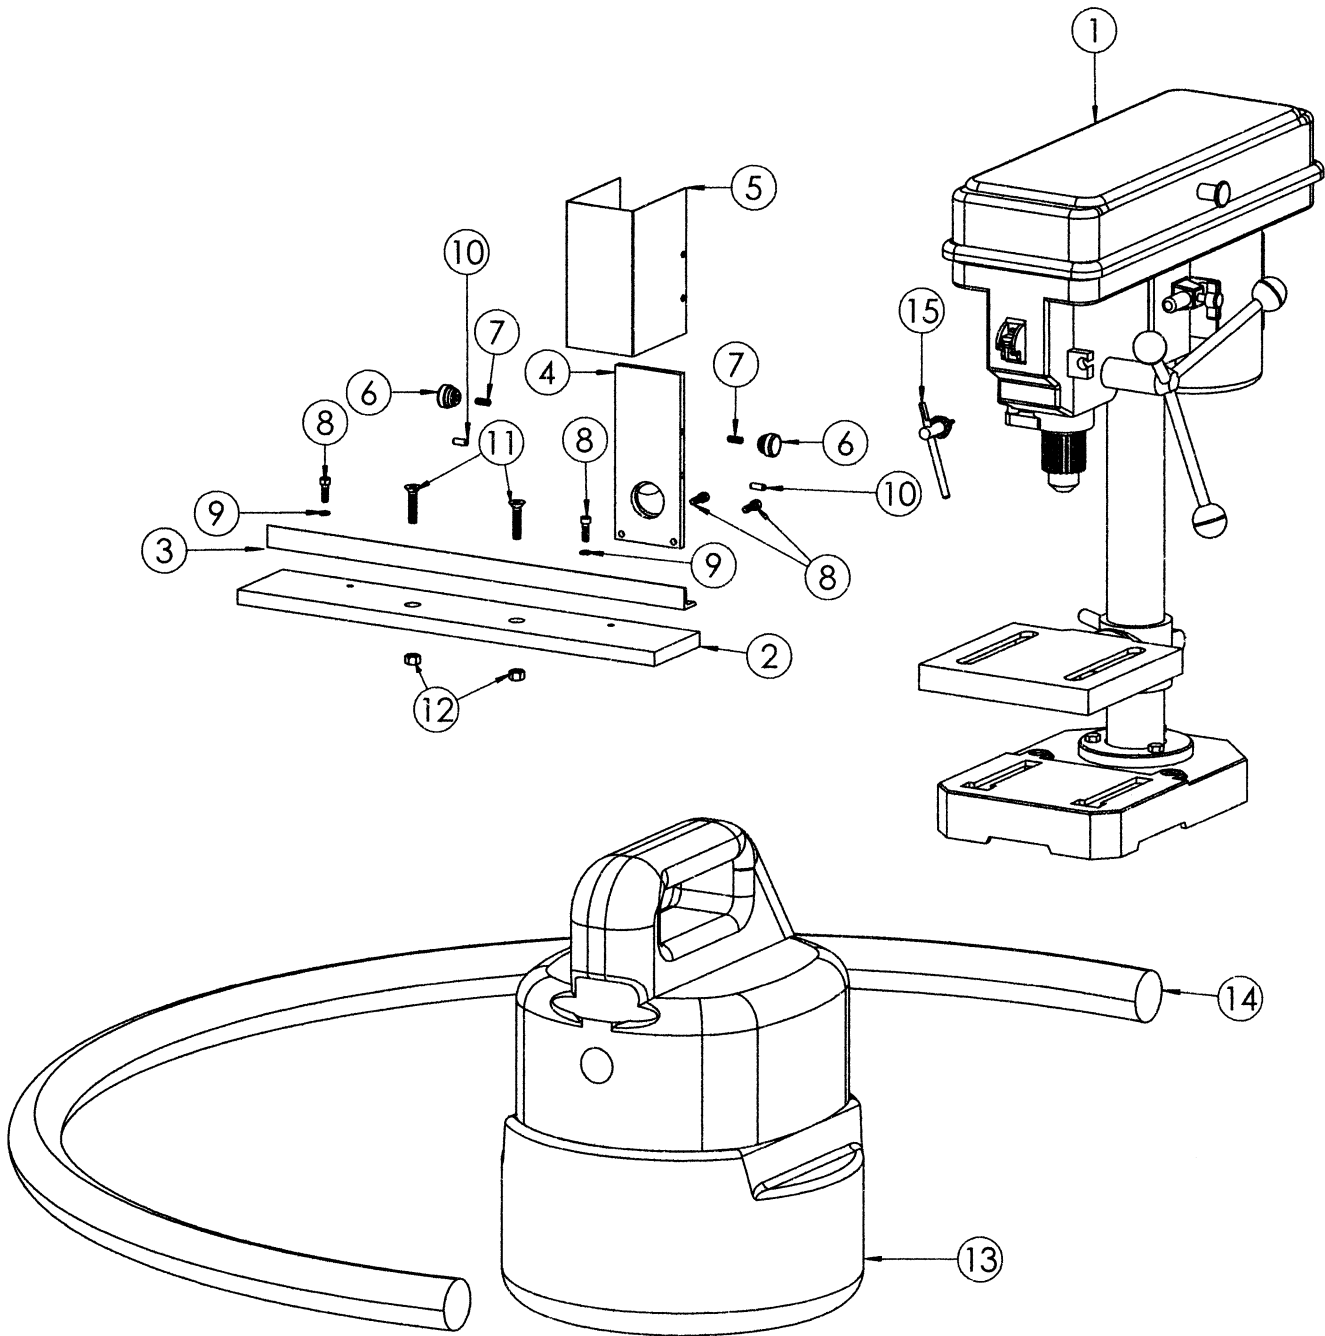

PARTS

Item No.	Quantity	Part Number	Description
1	1	DRL DRILL	Drill press
2	1	DRLBASE	Base for DRL
3	1	DRLFENCE	Fence
4	1	DRLDUST	Dust attachment
5	1	DRLCOV	Cover / guard
6	2	MCCX	1/4 - 20 Knob
7	2	252007SS	1/4 - 20 x 3/4" Set screw
8	4	252005SH	1/4 - 20 x 1/2" Socket head
9	2	250000LW	1/4" Lockwasher
10	2	250005DP	1/4 x 1/2" Dowel pin
11	2	252012FH	1/4 - 20 x 1 1/4 Flat head
12	2	252000LN	1/4 - 20 Lock nut
13	1	DRL VAC	Vacuum
14	1	DRL VAC H	Hose